


1-2. Opening, closing and locking the doors and trunk Smart access system with push-button start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.

(The driver should always carry the electronic key.)

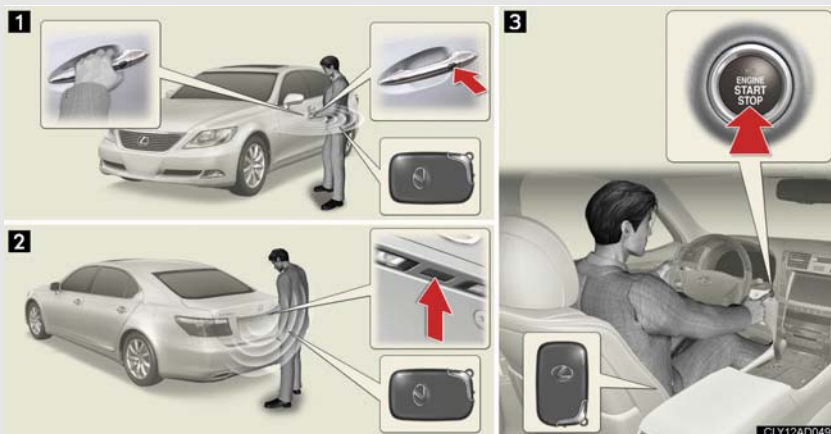

1 Locks and unlocks the doors (→P. 6)

2 Unlocks the trunk (→P. 6)

3 Starts the engine (→P. 115)

Locking and unlocking the doors



Press the lock button to lock the door.

Pressing and holding the button closes the windows and moon roof.



Grip the handle to unlock the door.

Make sure to touch the sensor on the back of the handle.

The door cannot be unlocked for 3 seconds after the door is locked.

Unlocking the trunk




Press the button to unlock the trunk.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.


Antenna location and effective range

■ Antenna location

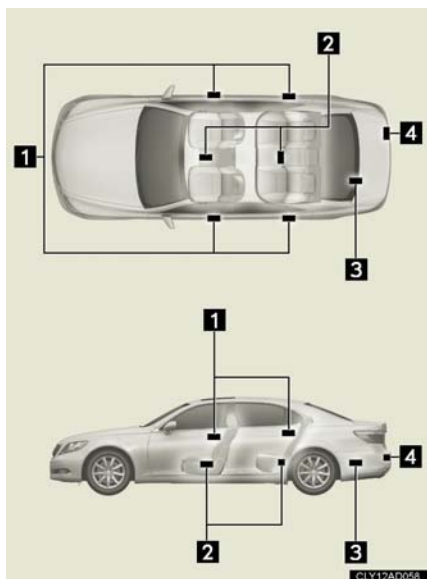

- 1 Antennas outside cabin
- 2 Antennas inside cabin
- 3 Antenna inside trunk
- 4 Antenna outside trunk

■ Effective range (areas within which the electronic key is detected)

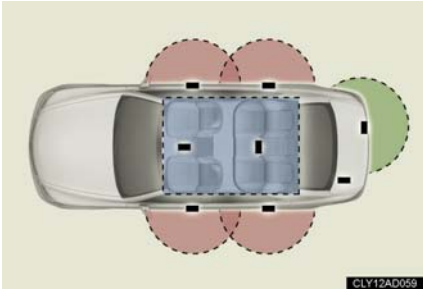

- When locking or unlocking the doors

The system can be operated when the electronic key is within about 2.3 ft. (70 cm) of an outside door handles. (Only the doors detecting the key can be operated.)

- When unlocking the trunk

The system can be operated when the electronic key is within about 2.3 ft. (70 cm) of the trunk release button.

- When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

■ Operation signals

Doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Trunk: A buzzer sounds to indicate that the trunk has been unlocked.


Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are operating.

■ Door lock buzzer

If a door is not fully closed, a buzzer sounds continuously if an attempt to lock the door is made. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Adjusting the volume of the buzzer

The operation signal buzzer and door lock buzzer can be set to the desired volume.

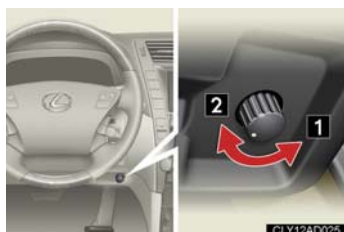

1 Increases the volume.

2 Decreases the volume.

The buzzer volume can be turned off by turning the knob clockwise until a click sound is heard.

■ Conditions affecting operation





The smart access system with push-button start, wireless remote control and engine immobilizer system may not operate normally in the following situations.
(Ways of coping: →P. 594)

- Near a TV tower, electric power plant, gas station, radio station, airport or other facility that generates strong radio waves or noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication devices
- When multiple electronic keys are in the vicinity
- When the electronic key has come into contact with, or is covered by a metallic object
- When other wireless key (that emits radio waves) is being used nearby
- When carrying the electronic key together with another vehicle's electronic key, a wireless key that emits radio waves, a personal computer or other devices that emit radio waves
- If window tint with a metallic content or metallic objects are attached to the rear window





■ Switching the door unlock function

It is possible to set which doors the entry function unlocks.


STEP 1 Turn the engine switch OFF.

STEP 2 When the indicator light on the key surface is not on, press and hold  ,  , or  for about 5 seconds while pressing and holding  .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

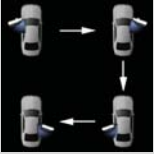Multi-information display	Unlocking doors	Beep
	Hold the driver's door handle to unlock only the driver's door	Exterior: Beeps 3 times Interior: Rings once
	Hold a passenger's door handle to unlock all the doors	
	Hold the door handle to unlock the front and rear doors on your side	Exterior: Beeps 4 times Interior: Rings once
	Hold the door handle to unlock the door	Exterior: Beeps once Interior: Rings once
	Hold a door handle to unlock all doors	Exterior: Beeps twice Interior: Rings once

STEP 3 Unlock the doors using the wireless remote control and open one of the doors.

If a door is not opened within 60 seconds after the  button is pressed, the doors will be locked again and the alarm will automatically be set.

In case that the alarm is triggered, immediately stop the alarm.

(→P. 66)

■ Battery-saving function

In the following circumstances, the entry function is disabled in order to prevent the vehicle and electronic key batteries from discharging.

- When the entry function has not been used for a month or more
- When the electronic key has been left within approximately 6 ft. (2 m) of the vehicle for 10 minutes or more

The system will resume operation when...

- The vehicle is locked using the door handle lock switch when carrying the electronic key on your person.
- The vehicle is locked/unlocked using the wireless remote control function.
(→P. 19)
- The vehicle is locked/unlocked using the mechanical key. (→P. 594)

■ Electronic key battery depletion

- The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
- The battery becomes depleted even if the electronic key is not used because the key always transmits radio waves. If the smart access system with push-button start or the wireless remote control does not operate, or the detection area becomes smaller, the battery may be depleted. Replace the battery when necessary. (→ P. 528)
- To avoid serious deterioration, do not leave the electronic key within 3 ft. (1 m) of the following electrical appliances.
 - TVs
 - Personal computers
 - Recharging cellular phones or cordless phones
 - Table lamps

■ To operate the system properly

Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not function.)

■ Note for the entry function

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases.
 - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
 - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the trunk is unlocked.
 - The electronic key is on the instrument panel, rear package tray or floor, or in the glove box when the engine is started or engine switch modes are changed.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone.
- Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The door will automatically be locked after approximately 60 seconds if the doors are not opened and closed.)
- Gripping the door handle when wearing a glove may not unlock the door.
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)

■ When the vehicle is not driven for extended periods

To prevent theft of the vehicle, do not leave the electronic key within 6 ft. (2 m) of the vehicle.

■ Security feature

If a door is not opened within approximately 60 seconds after the vehicle is unlocked, the anti-theft system automatically locks the vehicle again.

■ Alarms and warning indicators

A combination of exterior and interior alarms as well as warnings displayed on the multi-information display are used to prevent theft of the vehicle and unforeseeable accidents resulting from erroneous operation. Perform the appropriate correction procedure described in the following table.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the engine switch OFF.	Turn the engine switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

Alarm	Situation	Correction procedure
Interior alarm pings continuously.	The engine switch was turned to ACC mode while the driver's door was open (or the driver's door was opened while the engine switch was in ACC mode).	Turn the engine switch OFF and close the driver's door.
	The engine switch was turned OFF while the driver's door was open.	Close the driver's door.
Interior alarm sounds continuously. ^{*1}	When the engine switch is in IG-ON or ACC mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in P.	Shift the shift lever to P and turn the engine switch OFF.
Interior and exterior alarms sound continuously. ^{*1}	When the engine switch is in IG-ON or ACC mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in P.	Shift the shift lever to P, turn the engine switch OFF and close the driver's door again.
Interior alarm pings once. ^{*1}	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.	Start the engine with the electronic key present. ^{*2}

1-2. Opening, closing and locking the doors and trunk

Alarm	Situation	Correction procedure
Interior alarm pings once and exterior alarm sounds 3 times. ^{*1}	The driver's door was closed after the key was carried outside the vehicle, and the engine switch was not turned OFF.	Turn the engine switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the engine switch was not OFF.	Bring the electronic key back into the vehicle.

^{*1}: A message will be shown on the multi-information display in the instrument cluster.

^{*2}: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key. (→P. 12)

■ If the smart access system with push-button start does not operate properly

- Locking and unlocking the doors and trunk: Use the mechanical key. (→P. 594)
- Starting the engine: →P. 115

■ When the electronic key battery is fully depleted

→P. 528

■ Customization

Settings (e.g. smart access system with push-button start) can be deactivated. (→P. 627)

■ Certification for the smart access system with push-button start

- For vehicles sold in the U.S.A.

FCC ID: NI4TMLF-4

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

■ Caution regarding interference with electronic devices

- People with implanted pacemakers or cardiac defibrillators should maintain a reasonable distance between themselves and the smart access system with push-button start antennas, because the radio waves may affect the operation of such devices.
- Users of any electrical medical device other than implanted pacemakers and implanted cardiac defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.
Radio waves could have unexpected effects on the operation of such medical devices.

If necessary, the entry function can be disabled. Ask your Lexus dealer for details.

1-2. Opening, closing and locking the doors and trunk

Wireless remote control

The wireless remote control can be used to lock and unlock the vehicle and the trunk from outside the vehicle.




- 1 Locks all doors
- 2 Unlocks all doors
- 3 Opens the windows and moon roof (push and hold)
- 4 Unlocks the trunk (push and hold)
Vehicles equipped with a power trunk opener and closer: Opens the trunk (push and hold)
- 5 Sounds alarm (push and hold) (→P. 66)

1

Before driving

■ 2-step unlocking function

When you push the  button, the driver's door is unlocked. Pushing the button again within 3 seconds unlocks the other doors.

■ Operation signals

Doors: A buzzer sounds and the emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

Trunk: A buzzer sounds to indicate that the trunk has been unlocked.

Windows and moon roof: A buzzer sounds to indicate that the windows and moon roof are opening.

■ Door lock buzzer

If a door is not fully closed, a buzzer sounds continuously if an attempt to lock the door is made. Fully close the door to stop the buzzer, and lock the vehicle once more.

■ Adjusting the volume of the buzzer

The operation signal buzzer and door lock buzzer can be set to the desired volume.
(→P. 9)

■ Alarm

Using the wireless remote control to lock the door will set the alarm system.
(→P. 66)

■ Electronic key battery depletion

→P. 12

■ Security feature

→P. 13

■ If the wireless remote control does not operate properly

- Locking and unlocking the doors and trunk: Use the mechanical key.
(→P. 594)

- Starting the engine: →P. 115

■ When the electronic key battery is fully depleted

→P. 528

■ Conditions affecting operation

→P. 10

■ Customization

Settings (e.g. trunk unlocking function) can be changed. (→P. 627)

■ Certification for wireless remote control

► For vehicles sold in the U.S.A.

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio-TV technician for help.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Canada

NOTE:

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

1-2. Opening, closing and locking the doors and trunk

Doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


■ Entry function

→P. 6

■ Wireless remote control

→P. 19


■ Door lock switch

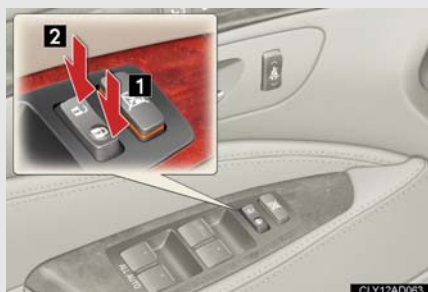

1 Locks all doors

2 Unlocks all doors

■ Inside lock button

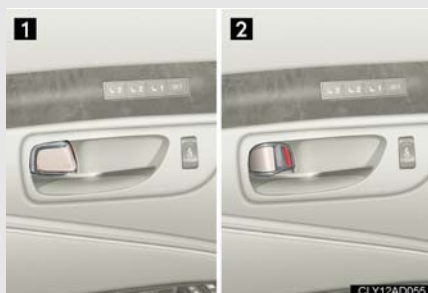

1 Locks the door

2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Locking the front doors from the outside without a key

The door cannot be locked if the engine switch is in ACC or IG-ON mode, or the electronic key is left inside the vehicle.

The key may not be detected correctly and the door may be locked.

Rear door child-protector lock



The door cannot be opened from inside the vehicle when the locks are set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

1
Before driving

Automatic door locking and unlocking systems

The following functions can be set or cancelled:

Function	Operation
Shift position linked door locking function	Shifting the shift lever out of P locks all doors.
Shift position linked door unlocking function	Shifting the shift lever to P unlocks all doors.
Speed linked door locking function	All doors are locked when the vehicle speed is approximately 12 mph (20 km/h) or higher.
Driver's door linked door unlocking function	All doors are unlocked when the driver's door is opened within 10 seconds after turning the engine switch OFF.

■ **Setting and canceling the functions**

To switch between setting and canceling, follow the procedure below:

STEP 1 Close all the doors and switch the engine switch to IG-ON mode. (Perform the step 2 within 20 seconds.)

STEP 2 Shift the shift lever to P or N, and press and hold the driver's door lock switch (**1** or **2**) for 5 seconds and then release.

The shift lever and switch positions corresponding to the desired function to be set or canceled are shown as follows.



Function	Shift lever position	Switch position
Shift position linked door locking function	P	1
Shift position linked door unlocking function		2
Speed linked door locking function	N	1
Driver's door linked door unlocking function		2

When the setting or canceling operation is complete, all doors are locked and then unlocked.

■ Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

■ Door closer (if equipped)

In the event that a door is left slightly open, the door closer will automatically close it to the fully closed position.

■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 594)

■ Customization

Settings (e.g. unlocking function using a key) can be changed. (→P. 627)

CAUTION

■ To prevent an accident

Observe the following precautions while driving the vehicle.

Failing to do so may result in a door opening and an occupant falling out, resulting in death or serious injury.

- Always use a seat belt.
- Always lock all doors.
- Ensure that all doors are properly closed.
- Do not pull the inside handle of the front door while driving.
- Set the rear door child protector locks when children are seated in the rear seat.

■ When a door is not completely closed (vehicles with door closer)

The door closer operates to automatically close the door. Be careful not to catch a finger or anything else in the door.

NOTICE

■ To prevent door closer malfunction (vehicles with door closer)

Do not apply force to a door while the door closer is operating.

1-2. Opening, closing and locking the doors and trunk

Trunk

The trunk can be opened using the trunk opener, entry function or wireless remote control.

■ Trunk opener



Push the opener switch.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

■ Entry function

→P. 6

■ Wireless remote control

→P. 19

Power trunk opener and closer (if equipped)



Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

Canceling the trunk opener feature



Turn the main switch in the glove box OFF to disable the trunk opener.

- 1 ON
- 2 OFF

The trunk lid cannot be opened even with the wireless remote control or the entry function.

1
Before driving

■ Trunk handle



Use the trunk handle when closing the trunk.

■ Trunk closer

In the event that the trunk lid is left slightly open, the trunk closer will automatically close it to the fully closed position.

■ Overload protection function (vehicles with a power trunk opener and closer only)

The trunk lid will not operate when excessive load is present on the top of the trunk lid.

■ Fall-down protection function (vehicles with a power trunk opener and closer only)


While the trunk lid is opening automatically, applying excessive force to it will stop the opening operation to prevent the trunk lid from rapidly falling down.

1-2. Opening, closing and locking the doors and trunk

■ Jam protection function (vehicles with a power trunk opener and closer only)

While the trunk lid is closing automatically, the trunk lid will stop closing and open if something gets caught.

■ Internal trunk release lever

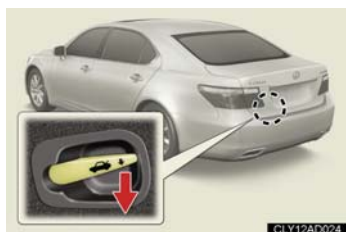

The trunk lid can be opened by pulling down on the glow-in-the-dark lever located on the inside of trunk lid.

The lever will continue to glow for some time after the trunk lid is closed.

■ Using the mechanical key

The trunk can be also opened using the mechanical key. (→P. 594)

■ Customization

Setting of power trunk opener and closer function can be deactivated. (→P. 627)

! CAUTION

■ Caution while driving

Keep the trunk lid closed.

This not only keeps personal belongings from being thrown out, but also prevents exhaust gases from entering the vehicle.

■ When children are in the vehicle

Never leave children unattended in the vehicle as they may lock themselves in the vehicle or trunk, which could cause the child to overheat or suffocate, resulting in death or serious injury.

■ When the trunk lid is not completely closed

The trunk closer operates to automatically close the trunk lid. Be careful not to catch a finger or anything else in the trunk lid.

! CAUTION

- **Jam protection function (vehicles with a power trunk opener and closer only)**
 - Never try using any part of your body to activate the jam protection function intentionally.
 - The jam protection function may not work if something gets caught just before the trunk lid fully closes.
- **When opening the trunk lid (vehicles with a power trunk opener and closer only)**
Remove any heavy loads, such as snow, on the trunk lid before opening it.
Failure to do so may cause the trunk lid to fall down due to the load after it opens.
- **Operating the power trunk opener and closer**
Do not allow a child to open or close the trunk lid. Doing so may cause the trunk lid to operate unexpectedly and part of the child's body may become caught.

! NOTICE

- **To prevent trunk closer malfunction**
Do not apply force to the trunk lid while the trunk closer is operating.